

Fitting Instructions #RC0081RZIS

Toyota Hilux Gen 8

Sway Bar Stabiliser Kit

Fitting of this bar should be carried out by qualified persons only.

- o Jack the Vehicle and place on support stands.
- o Fit the L Brackets, U-bolts, link pins and nuts as per the photo. **Do not tighten.**
- o The wiring loom inside of the chassis rail needs moving out of the way to allow fitment (Use a zip tie or such to refit)
- o **Note** position of the LH bracket in the Figure 1 and match the RH side.

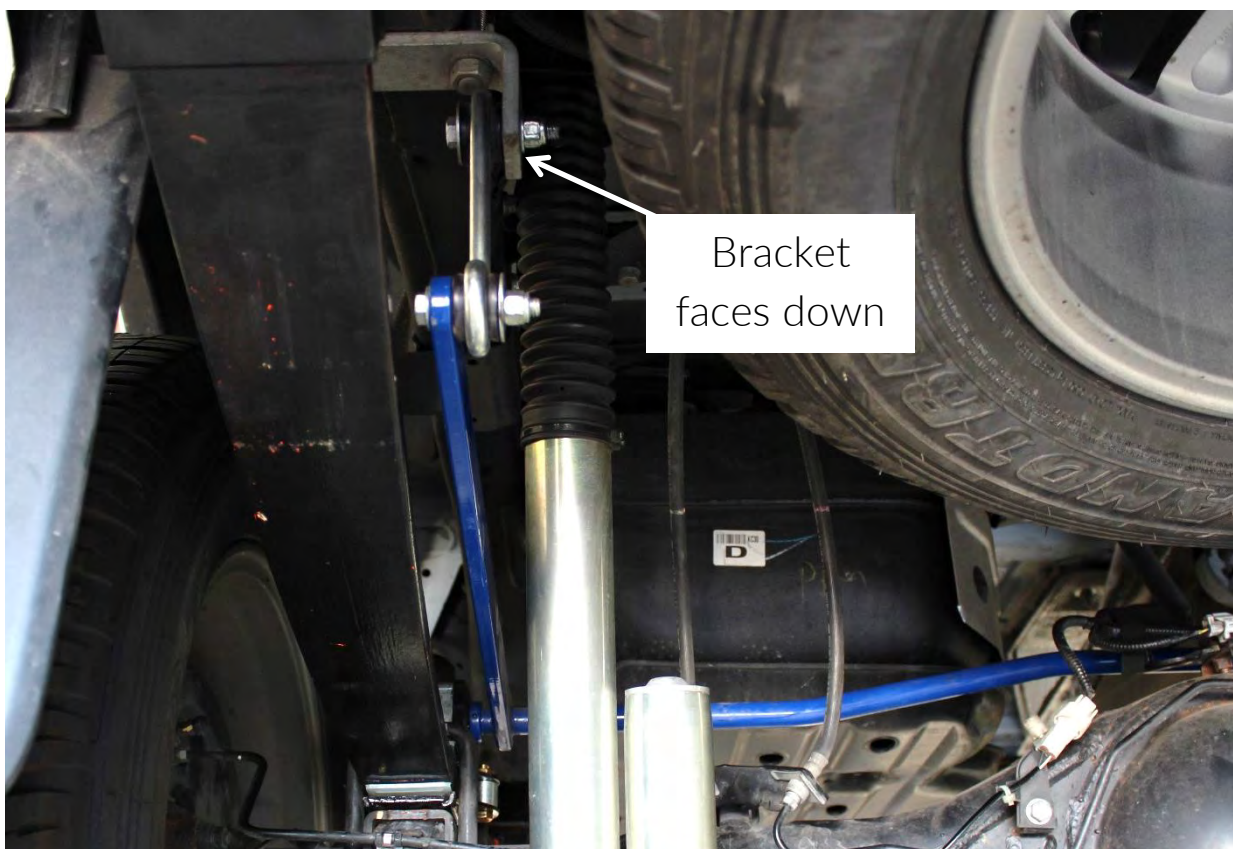


Figure 1 - Sway bar installation.

- o Fit the Sway Bar Mount bushings to the bar,
- o 4. Place the Bar onto the top of the diff.
- o 5. Place a stand under one side of the diff and remove the leaf spring U Bolts. Remove the OE Bump stop.
- o 6. Fit the new Bracket over the Bush and Mount them to the Diff using the OE U Bolts. Nip up the U Bolts and Repeat for the other side. Check the position of the bar making sure the arms are even both sides. Tighten U bolts to Manufactures torque



Figure 2 - Sway bar installation.



Figure 3 - Sway bar installation.

- o Swing the bar up towards the rear and fit the sway bar links, bolts, nuts and washers provided to the bar. We recommend the middle hole is used initially. With the link approximately vertical tighten the Chassis U bolts.



Figure 4 - Sway bar installation.