


VEHICLE Toyota Prado 150
MODEL YEAR 2010 - 2013
PRODUCT Auxiliary battery tray
PRODUCT CODE 009

Battery Tray Details

Fits up to N70zz 12 inch case battery.
Comes with: 2 x 6mm bolts, 2 x 4mm bolt,
1 x hold down with J hooks

1. Battery tray fits into the front of the right hand drivers side of the vehicle under the bonnet.
2. There is a black bracket that holds the air con pipe in position. Undo this bracket and remove. Sit Battery Tray into position, re-use bolt and nut from air con bracket to fix con pipe to the tray. Make sure you don't undo the bolt that joins the air con pipe together as it will release the air con gas.

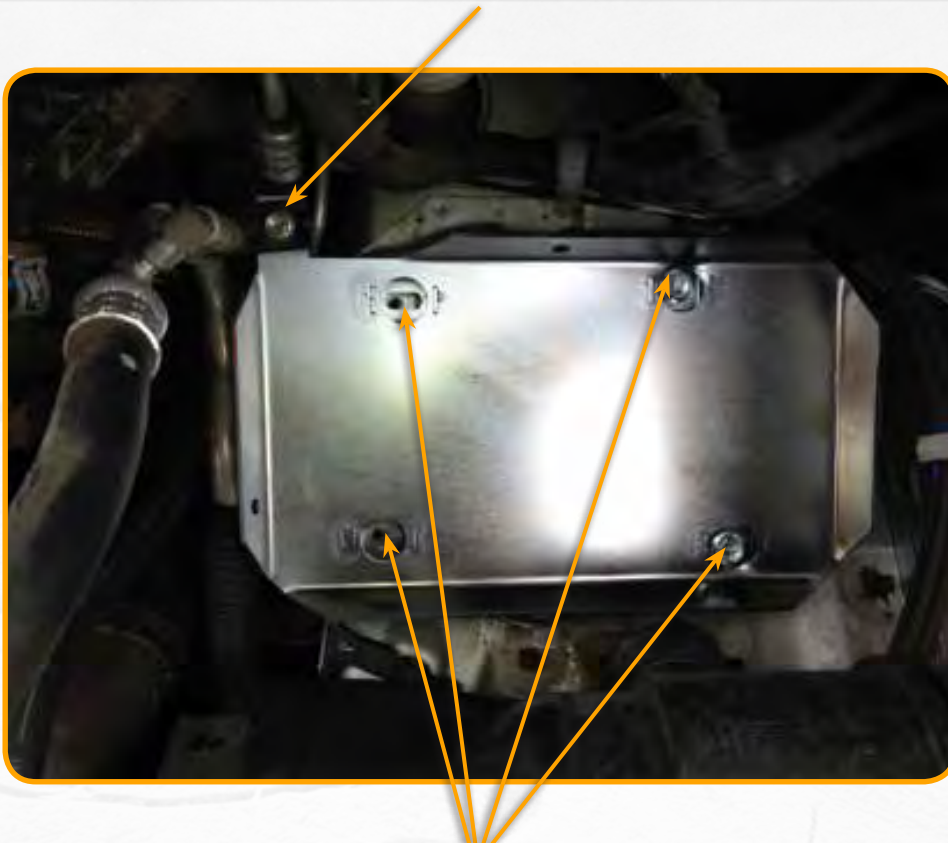

3. Place the 2 x 4mm bolts in the tray in the holes towards the the engine. Then place the 2 x 6mm bolts in the holes towards the guards and tighten all bolts.
4. Sit battery in tray, fit battery hold down and tighten.