


MONROE

Technical Notes

TECHNICAL NOTES FROM THE LEADERS IN RIDE PERFORMANCE

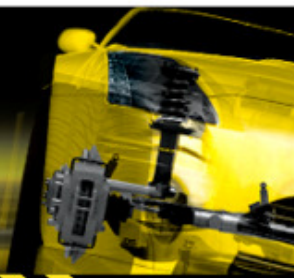

Monroe Technical Note

105

When replacing struts, or fitting Magic Camber, it is recommended that the clevis bolts are replaced using kit SMP-352



Monroe Technical Helpline
1800 088 205

www.monroe.com.au